



Covering All Your Rental Needs

www.pacificpartycanopies.com

Farberware
Stainless Steel Coffee Urn
36 Cup Capacity

Important Safeguards

1. Read all instructions
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or base in water or other hot liquid.
4. Close supervision is necessary when used near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause hazards.
8. Do not use outdoors in inclement weather without shelter.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner or in a heated oven.
11. Do not use appliance for other than intended use.
12. In replacing the cover, make sure that it is seated all around the rim of the body. To remove, grasp knob and lift off. For models with cover locking device, replace cover by seating it on the urn with tabs exposed and turning it in a clockwise direction until cover tabs enter completely into slots of handles. To remove, grasp knob, turn in a counter clockwise direction to release tabs from handles and lift off.
13. Scalding may occur if the lid is removed during the brewing cycles.

Using the Coffee Urn

1. Remove cover and basket. Check to see that spigot is closed. Fill urn with COLD, fresh tap water – fill according to markings on inside of urn for number of cups desired (see guide below). Use COLD tap water – the automatic brewing cycle is timed to begin with a cold water start. If you start with warm or hot water, the coffee will brew very weak.
2. Wet coffee basket to help keep small particles of coffee from sifting through. Add desired amount of regular or percolator grind coffee to basket and place basket on the pump tube. Pump tube must be resting in center well.

(continued)

The following chart suggests the amount of coffee to use for medium brew; amounts can be varied to suit personal taste and particular coffees:

Number of Cups	Amount of Coffee	Number of Cups	Amount of Coffee
12	1 ¼ cups	30	3 cups
18	1 ¾ cups	36	3 ½ cups
24	2 ½ cups		

3. Replace the urn cover and secure into position by turning cover clockwise until cover tabs fit into handle slots.
4. Plug into standard household 120 volt AC wall outlet only. To avoid unnecessary strain on the heating mechanism, **PLUG IN COFFEE URN AFTER THE WATER AND COFFEE ARE ADDED.**
5. When coffee brewing is complete, percolating will stop and the red indicator light will come on. The urn automatically switches to “keep warm” setting to preserve fresh tasting coffee at hot, ready-to-serve temperature. For best flavor, remove coffee basket and pump tube when brewing is complete. **REMOVE PARTS CAREFULLY; COFFEE MAKER AND PARTS WILL BE HOT.** Also, be sure to unplug the urn when only 1 or 2 cups of coffee remain. Hot fruit or wine punches may be prepared in this coffee urn.

Cleaning Instructions

1. After each use, make sure plug is removed from wall outlet. Let urn cool. Remove cover, coffee basket, and pump tube carefully – grounds and remaining coffee may still be warm.
2. Wash urn with warm water and detergent – **NEVER IMMERSER BASE OF URN!**
3. The cover, basket, and pump tube (with spring) may be placed in dishwasher. **NEVER WASH URN BODY IN DISHWASHER!**
4. Rinse all parts thoroughly and dry.
5. Make sure the washer at the bottom of pump tube remains loose. If coffee grounds lodge in this area, remove under running water or with a wooden toothpick.